


Quick Installation Guide MultiPlus-II

24V 3000VA 230Vac
48V 3000VA 230Vac (hw rev 08 and above)
48V 5000VA 230Vac (hw rev 03 and above)

 
www.victronenergy.com

Included


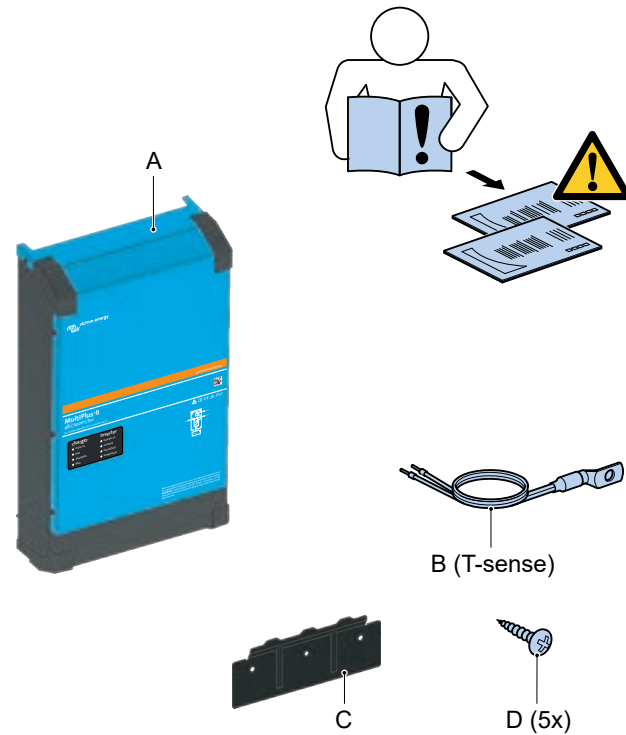


For fuse values:
refer to the user manual


Fuse (not included)





Not included

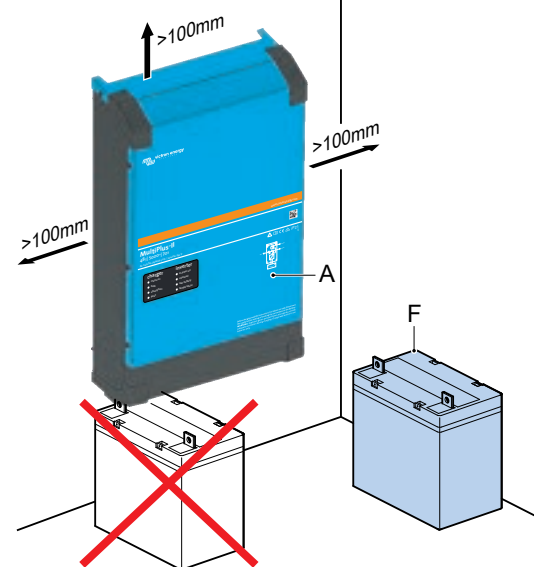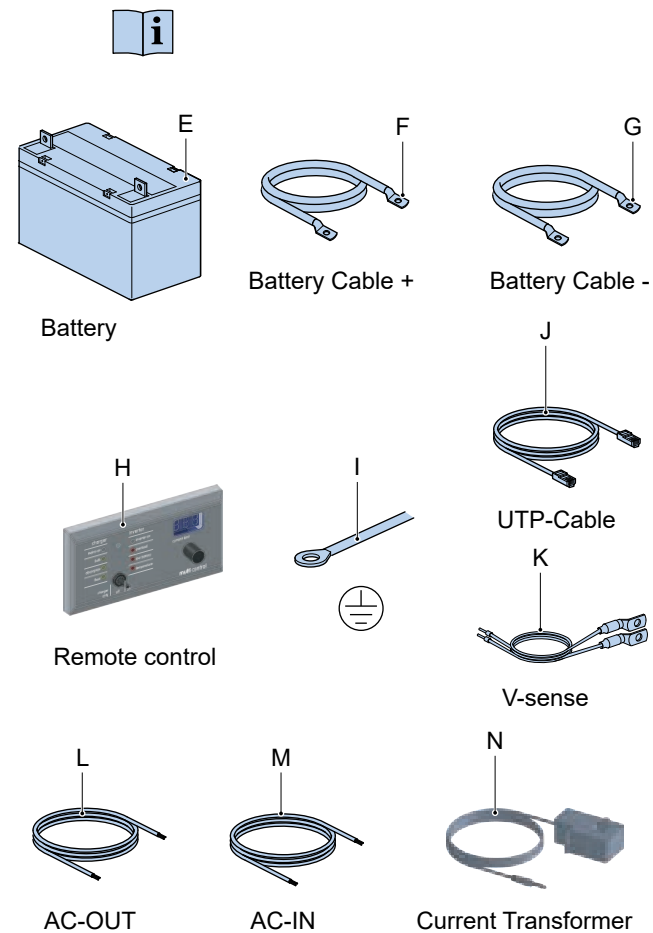



1

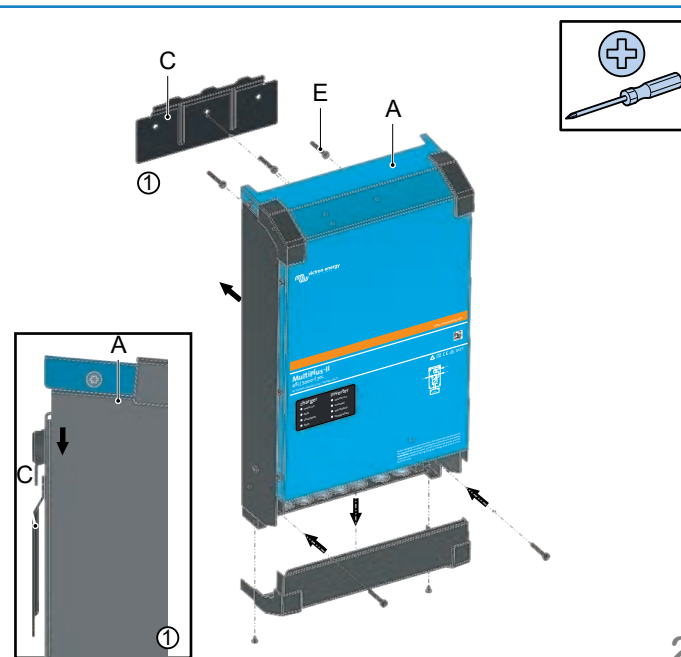



2

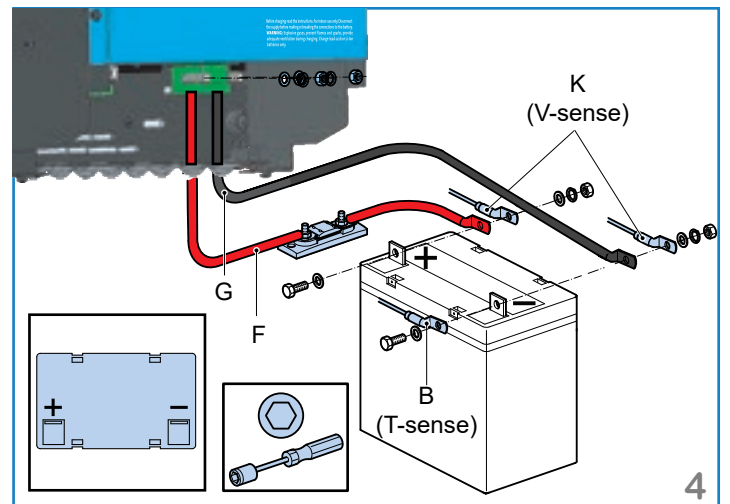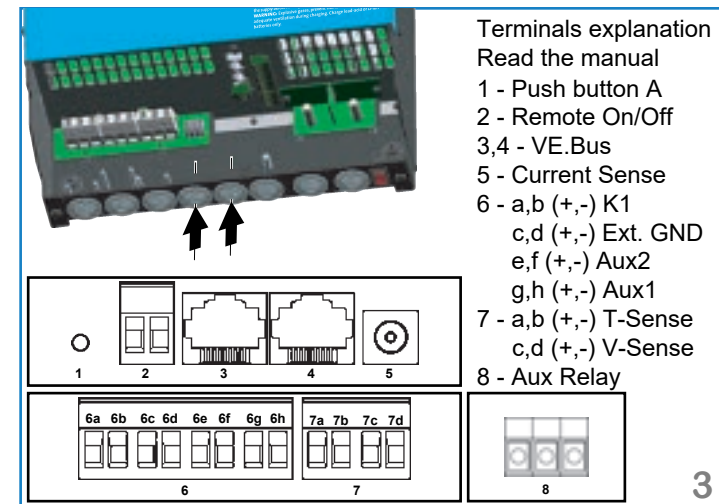



4

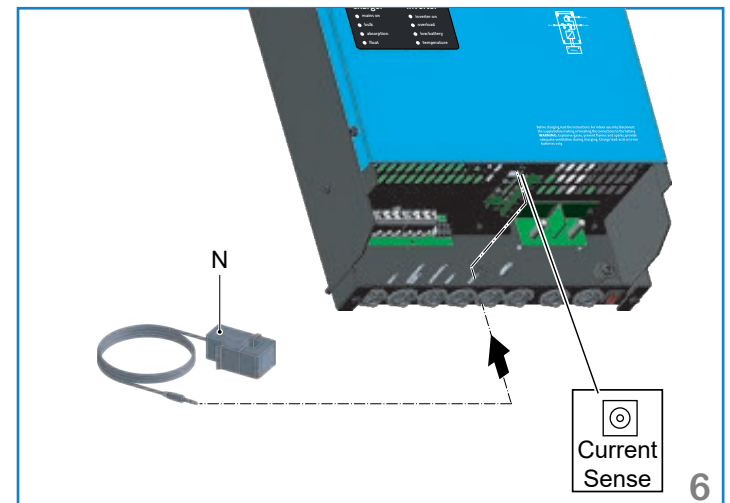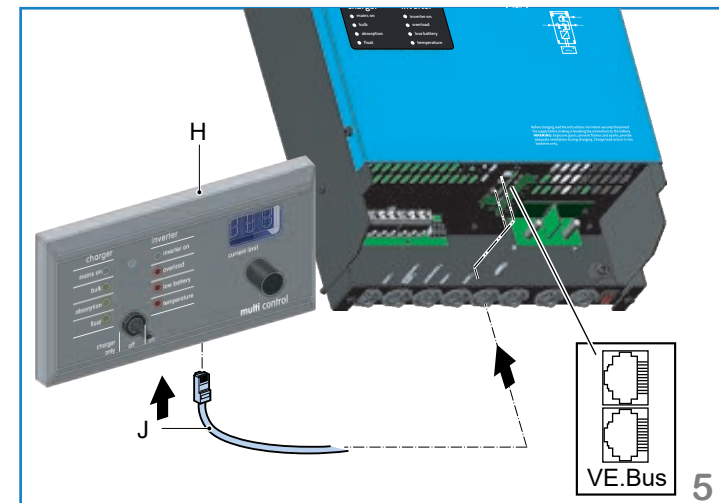

6

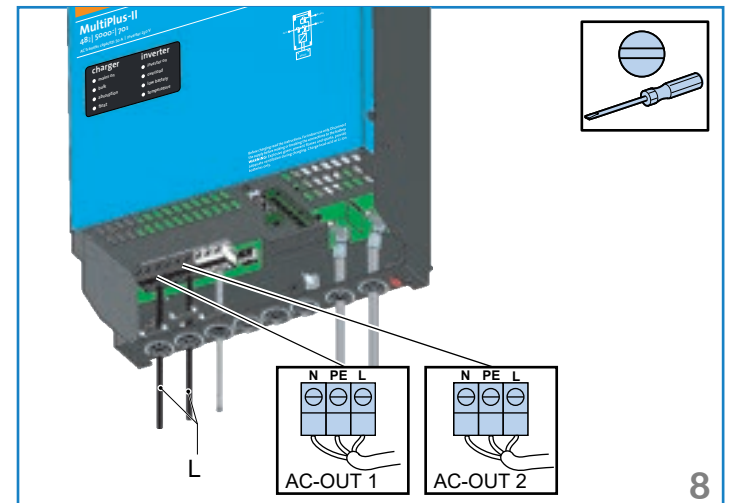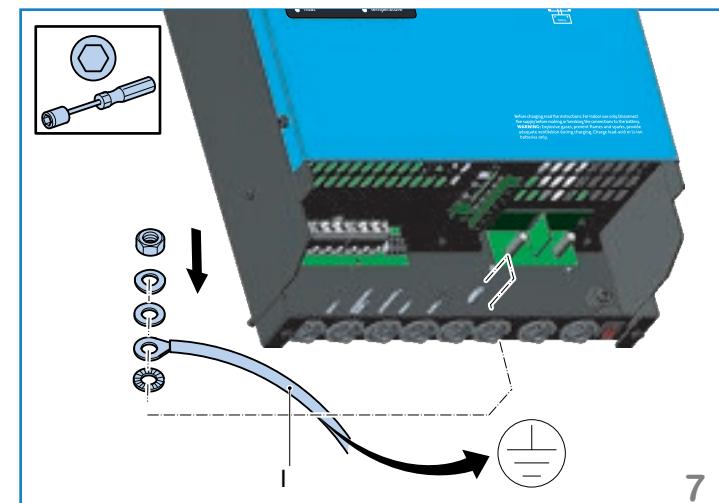

8

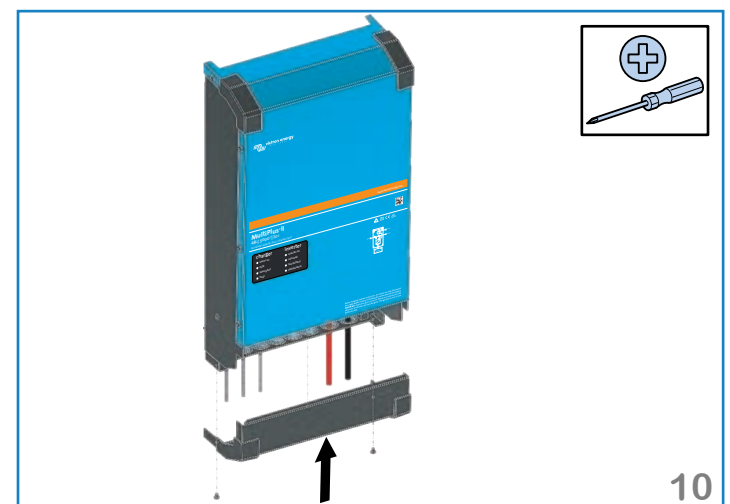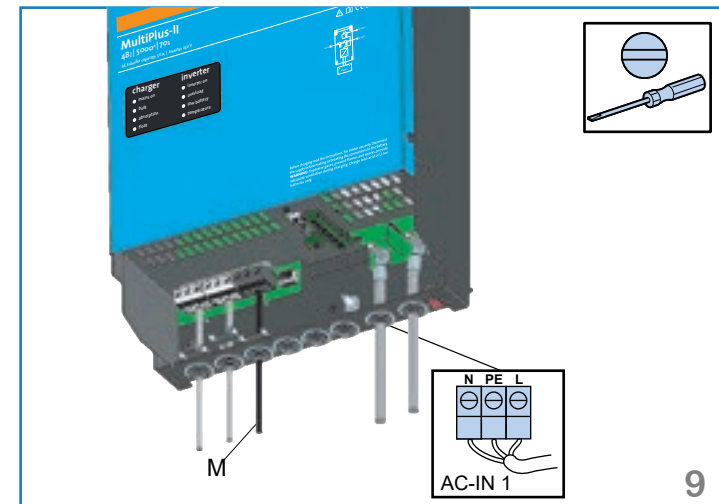

10